

## FRONT FENDERS

Fenders are 1/4" thick and come complete with built-in polymer liners to resist starring. All front fenders feature the factory style belt line and ship in gray primer gel-coat, ready to sand and paint. Easy to install with no hood modifications or additional hardware required.

Our front fenders are compatible with after market front & rear blinker bars.

### 359 Models



Fiberglass 359 factory replacement fenders.

**FFS-359 Stock Front Fender - Pair**

### 378 & 379 Models

All 379 fenders come pre-drilled, are 1/4" thick and with built-in polymer liners. Easy to install with no hood modifications or additional hardware required.




These original style front fenders are a perfect cost effective replacement for factory 378 & 379 fenders.

**FFS-379 378, 379 Stock Front Fender - Pair**

Ready for a little change? This 4" sidewall and additional 3.25" of rear length is your answer.

**FF4-2 378, 379, 4 Inch Side Wall Front Fender - Pair**

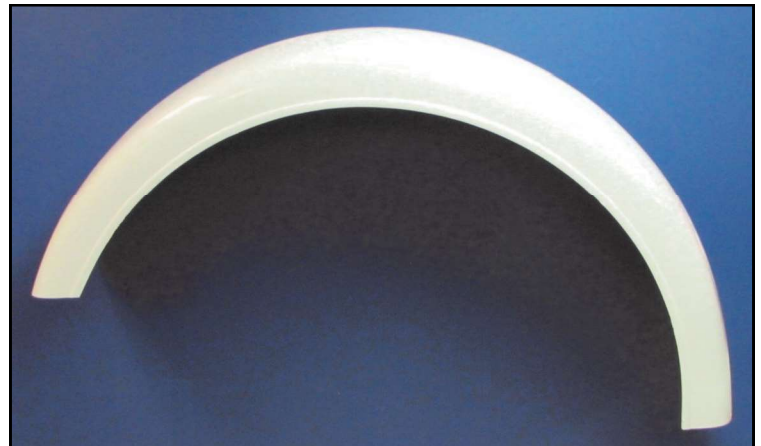



Our standard 6" sidewall fender with an additional 3.25" of rear length, make this the perfect choice for those wanting something custom.

**FF-2 378, 379 Standard Front Fender - Pair**

Extends 10" beyond stock length, but can be trimmed to achieve desired ground clearance.

**FFLR-2 379 Low Rider Front Fender - Pair**



This 6-piece kit consists of the 379 low rider front fenders, paintable stainless hood extensions, and extended 8" face fiberglass cab/cowl panel.

**FFLR-3X 6-Piece 379 Low Rider Kit**  
(Fits 379 extended hood only)

## 389 Models



Factory style 388 & 389 fiberglass replacement front fenders.

**FFS-389 388, 389 Stock Front Fender - Pair**

Step out of the box with these mildly custom front fenders featuring a 4.5" sidewall with 4.5" of additional rear length.

**FF389-4 388, 389, 4.5" Sidewall Front Fender - Pair**

Photo Not Available At Time Of Print



Fibertech's standard 388, 389 front fenders feature a 6.5" sidewall and 4.5" of additional rear length.

**FF389-2 388, 389 Standard Front Fender - Pair**

Feeling a little more adventurous? How about 10 inches of additional rear length and a 6.5" sidewall.

**FF389-LR 389 Low Rider Front Fender - Pair**





## REAR FENDERS

Fenders are 1/4" thick and come complete with built-in polymer liners to resist starring. Rear fenders are designed for 52" axle spacing and have 6" sidewalls.




**FRTDH-2 Double Hump Rear Fender - Pair**



**FRTC-2 Classic Rear Fender - Pair**



**FRT-2 Standard Rear Fender - Pair**

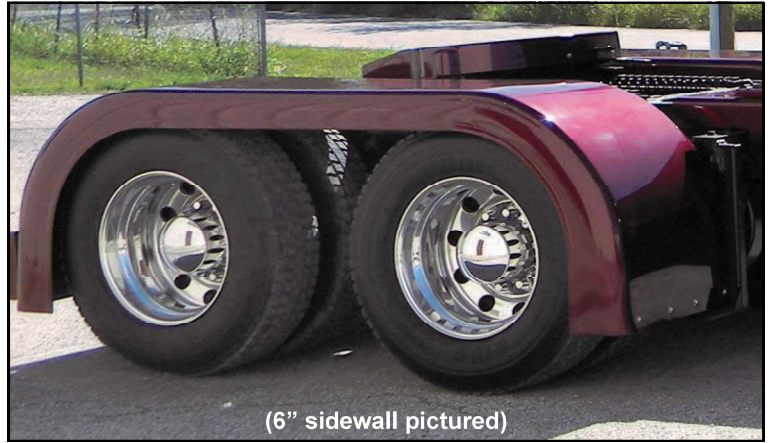

(6" sidewall pictured)

**FRTSL-2 6" Sidewall Straight Line Rear Fender - Pair**

**FRTSL3-2 3" Sidewall Straight Line Rear Fender - Pair**



**FRTL-2 Low Rider Rear Fender - Pair**



**FRSC-4 Custom Single Axle Rear Fender (Tandem Application)**





**FRS-2 Standard Single Rear Fender - Pair**  
**FRS-4 Standard Single Rear Fender - Set of 4**



**FRS3-2 3" Side Wall Single Rear Fender - Pair**  
**FRS3-4 3" Side Wall Single Rear Fender - Set of 4**



Available for both dual tire and super single tire applications.

- FRSC-2 Custom Single Rear Fender - Pair**
- FRSC-4 Custom Single Rear Fender - Set of 4**
- FRSSC-2 Super Single Rear Fender - Pair**
- FRSSC-4 Super Single Rear Fender - Set of 4**



**FRQ-2 36" Rear Quarter Fender - Pair**




**FRH-2 Half Tandem Fender - Pair**

# PETERBILT ACCESSORIES

## CAB AND COWL PANELS


### 359 Cowl Panels

CW-359 359 Extra Wide Cowl Panel - Pair  
(21-3/4" X 21-7/8")

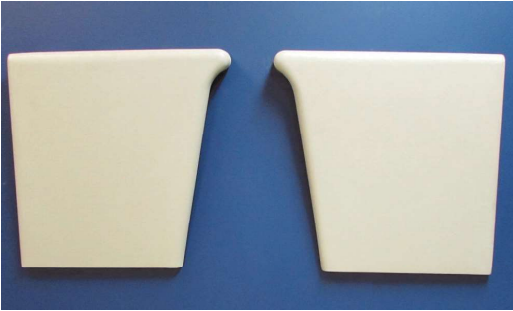

### 379 Cowl Panels

CW-379 379 Extra Wide Cowl Panel - Pair

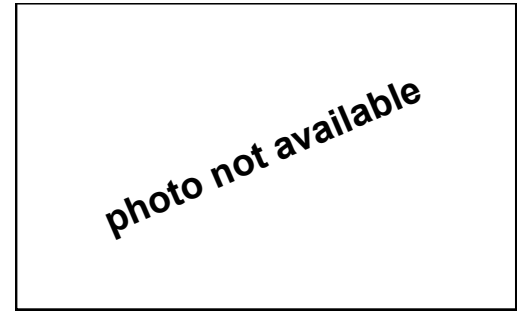

### 379 Models

#### 6" Cab/Cowl Panels

CP-2 379 Cab/Cowl Panel


#### 8" Cab/Cowl Panels

CP-8-2 379 Cab/Cowl Panel

### 379 Models

#### 8" Custom Cab/Cowl Panels

CP379-S -8 379 Custom 8" Cab/Cowl Panel w/scoop

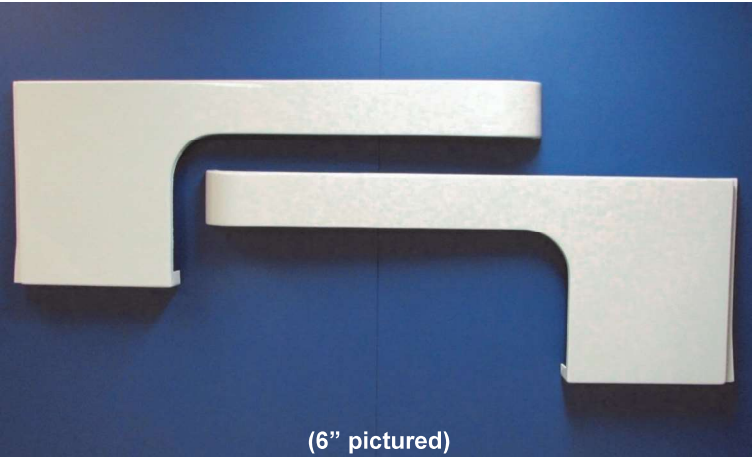

### 386 Models

CP389-8-2 386 8" drop Cab/Cowl Panel with rear front fender section.







**388 Models**

**389 Short Hood Models**

**6" Cab/Cowl Panels**

CP388-11 388 Cab/Cowl Panels - 2011 thru 2014 Models with factory exhaust

389 Short Hood Cab/Cowl Panels - 2015+ Models with factory exhaust

**389 Models**

**6" Cab/Cowl Panels**


- CP389-2 389 Cab/Cowl Panels - 2008/2009 Models
- CP389-10 389 Cab/Cowl Panels - 2010 Models
- CP389-11 389 Cab/Cowl Panels - 2011-2017 Models
- CP389-20 389 Cab/Cowl Panels - 2018+ Models
- CP389-G 389 Cab/Cowl Panels - Glider Application

**8" Cab/Cowl Panels**

- CP389-8-2 389 Cab/Cowl Panels - 2008/2009 Models
- CP389-8-10 389 Cab/Cowl Panels - 2010 Models
- CP389-8-11 389 Cab/Cowl Panels - 2011-2017 Models
- CP389-8-20 389 Cab/Cowl Panels - 2018+ Models
- CP389-8-G 389 Cab/Cowl Panels - Glider Application



2008/09 Models w/Factory Exhaust

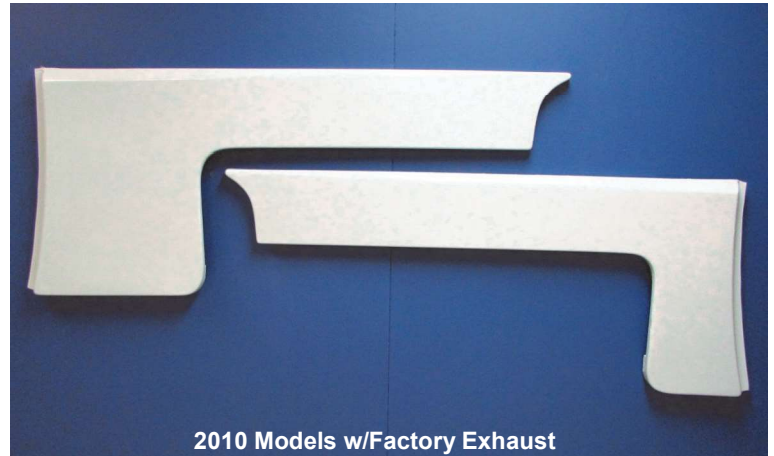

2010 Models w/Factory Exhaust




2011- 2017 389 Models w/Factory Exhaust  
(8" pictured)



389 Glider Application  
(6" pictured)

## Sleeper Panels

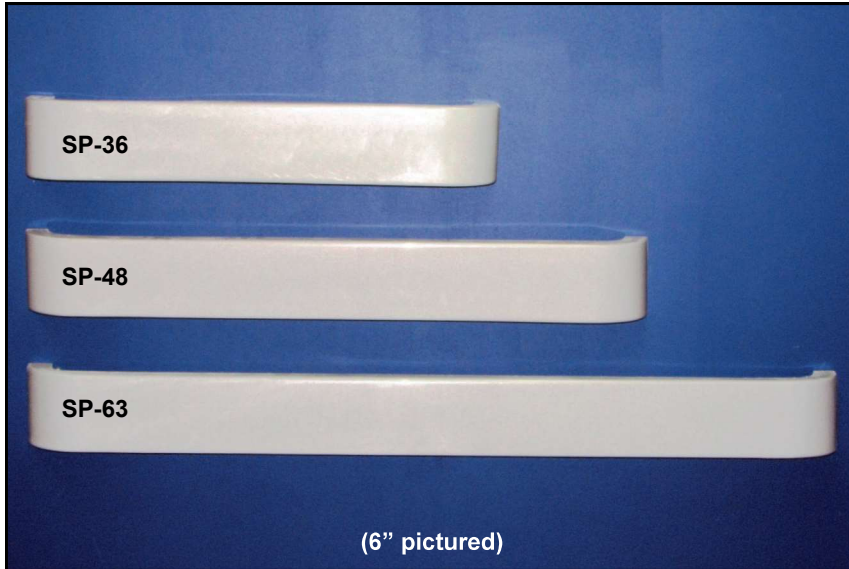


### 6" Sleeper Panels

SP-36	6" X 36" Sleeper Panel/Pair
SP-48	6" X 48" Sleeper Panels/Pair
SP-63	6" X 63" Sleeper Panels/Pair
SP-63X	6" X 63" Sleeper Panels w/Ext/Pair
SP-70X	6" X 70" Sleeper Panels w/Ext/Pair

### 8" Sleeper Panels

SP-36-8	8" X 36" Sleeper Panels/Pair
SP-48-8	8" X 48" Sleeper Panels/Pair
SP-63-8	8" X 63" Sleeper Panels/Pair
SP-63X-8	8" X 63" Sleeper Panels w/Ext/Pair
SP-70X-8	8" X 70" Sleeper Panels w/Long Ext
SP-72X-8	8" X 70" Sleeper Panels w/Short Ext

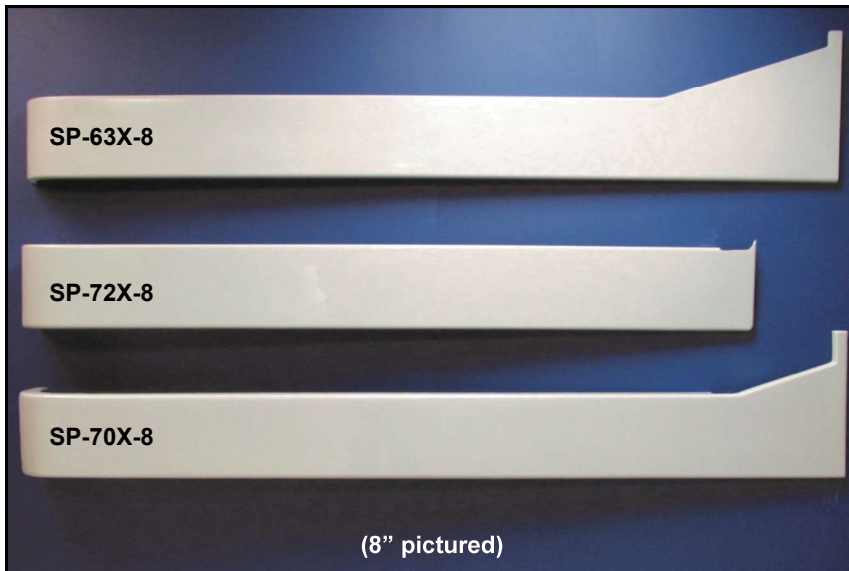

### 6" Full Wrap Sleeper Panels

SP-36W	6" X 36" Full Wrap Sleeper Panel/Pair
SP-48W	6" X 48" Full Wrap Sleeper Panel/Pair
SP-63W	6" X 63" Full Wrap Sleeper Panel/Pair

### 8" Full Wrap Sleeper Panels

SP-36W-8	8" X 36" Full Wrap Sleeper Panel/Pair
SP-48W-8	8" X 48" Full Wrap Sleeper Panel/Pair
SP-63W-8	8" X 63" Full Wrap Sleeper Panel/Pair





## Step / Battery Box Cover

CSB-2 Step / Battery Box Cover - Pair

SSK-3 Flat 24" X 2" Stainless Accent Strips - Set of 4



## UNIVERSAL ACCESSORIES

### 5th Wheel Covers

CFW-01H Holland

CFW-02 Jost



### Rear Frame Cover

Available pre-drilled, ready for light installation or blank for custom designs.




RFC-01 Rear Frame Cover Blank

RFC-02 Rear Frame Cover Light Ready

\* Trimming may be necessary for proper fit

## CAB ROOF CAPS

### 359, 378, 379, 386, 388 & 389 Regular Cab Models

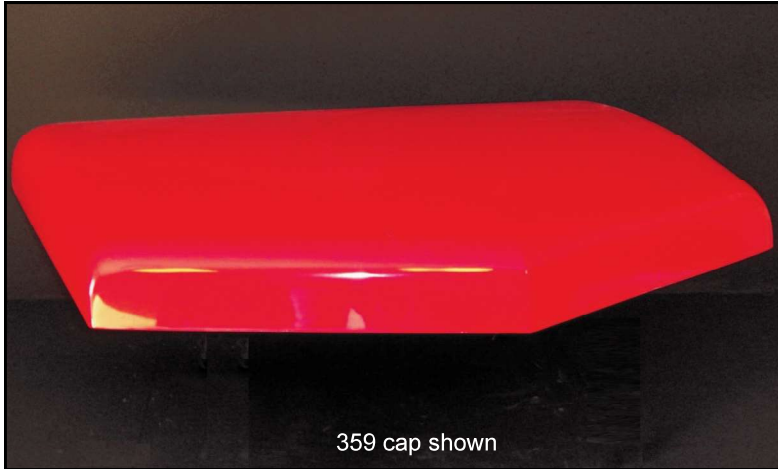

Fiberglass replacement roof cap for flat top /regular cab models.

**RC-359 One-Piece 359 Roof Cap**

**RC-379 378, 379, 386, 388 & 389 Regular Cab (flat top) Roof Cap**

Fiberglass replacement for Ultra Cab models also available. **PHOTO NOT SHOWN**

**RC-379-UC 378, 379, 386, 388 & 389 Ultra Cab Roof Cap**

## SLEEPER ROOF CAPS

### Ultra Flat Top Conversion

US PATENT D627,688


Get that cool flat top look and keep your Ultra Cab™ comfort. Comes complete with bonded aluminum reinforcement to attach headliner.

Available for 36", 48", and 63" sleepers.

**RC-36 36" Ultra Flat Top Sleeper Cap**

**RC-48 48" Ultra Flat Top Sleeper Cap**

**RC-63 63" Ultra Flat Top Sleeper Cap**

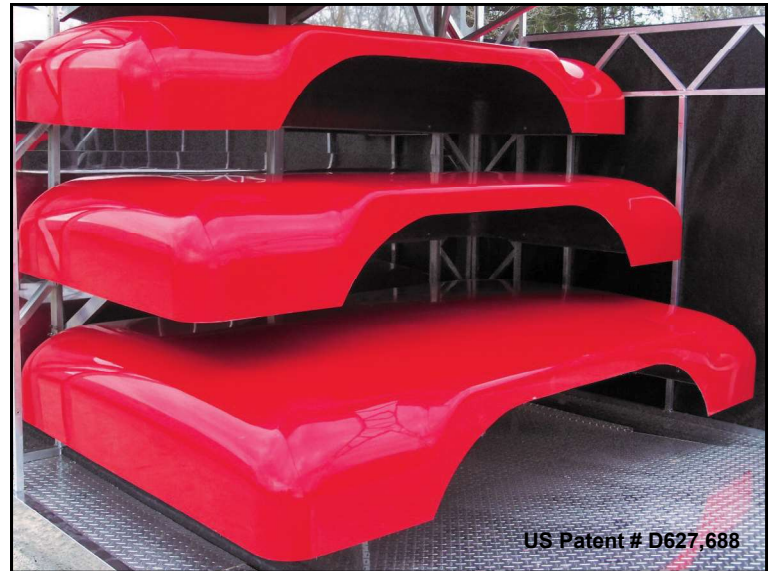

### Factory Style Flat Top

Factory replacement for flat top sleeper. Comes complete with fiberglass reinforcement to attach headliner.

**RC-36FT 36" Flat Top Sleeper Cap**

**RC-63FT 63" Flat Top Sleeper Cap**





## DAY CAB CONVERSIONS

### Extended Day Cab Kit - 378, 379, 386, 388, 389 Uni-Bilt™ & Ultra Cab™ Models

This aftermarket 6" fiberglass cab extension provides 4" off additional leg room and comes complete with a fully welded, aluminum sub-structure for superior strength and stability. This unit is easy to install with no modifications to the factory cab and can be pre-painted prior to installation.

**Extended Regular Cab (flat top)**



**Extended Ultra Cab**



**PBK-2U-XB**

**PBK-4-XB**

Includes:

**BASIC KIT - Ultra Cab**

**BASIC KIT - Regular Cab (flat top)**

3-Piece 6" Fiberglass Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
Mounting Hardware

**PBK-2U-XD**

**PBK-4-XD**

Includes:

**DELUXE KIT - Ultra Cab**

**DELUXE KIT - Regular Cab (flat top)**

3-Piece 6" Fiberglass Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
19" X 36" Rear Window Glass  
Window Seal & Lockbead  
Mounting Hardware

**PBK-2U-XCP**

**PBK-4-XCP**

Includes:

**COMPLETE KIT - Ultra Cab**

**COMPLETE KIT - Regular Cab**

3-Piece 6" Fiberglass Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
19" X 36" Rear Window Glass  
Window Seal & Lockbead  
Padded Vinyl Interior Panel with Interior Boot  
(Available in black, tan, light or dark gray vinyl)  
Mounting Hardware



**\*\* Kits do not come with any type of air ride or suspension kit \*\***

## Flat Panel Day Cab Kit - 378, 379, 388, 389 Uni-Bilt™ & Ultra Cab™ Models

This one-piece fiberglass panel is the simple solution for your day cab needs. Comes complete with bonded, internal aluminum bracing and mounting hardware.




Ultra Cab Flat Panel



Regular Cab Flat Panel (flat top)



Dark Gray Interior Panel

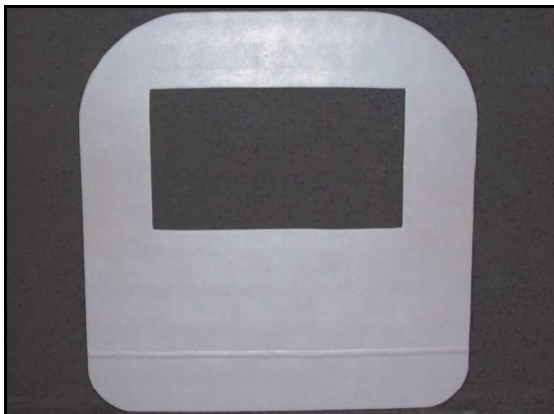

Light Gray Interior Panel

**PBK-U1-B**

**PBK-3-B**

Includes:

**BASIC KIT - Ultra Cab**

**BASIC KIT - Regular Cab (flat top)**

One-piece Fiberglass Panel  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
Mounting Hardware

**PBK-U1-D**

**PBK-3-D**

Includes:

**DELUXE KIT - Ultra Cab**

**DELUXE KIT - Regular Cab (flat top)**

One-piece Fiberglass Panel  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
19" X 36" Rear Window Glass  
Window Seal & Lockbead  
Mounting Hardware

**PBK-U1-C**

**PBK-3-C**

Includes:

**COMPLETE KIT - Ultra Cab**

**COMPLETE KIT - Regular Cab (flat top)**

One-piece Fiberglass Panel  
Bonded 1" X 2" Aluminum Bracing  
Fiberglass Interior Window Trim  
19" X 36" Rear Window Glass  
Window Seal & Lockbead  
Padded Vinyl Interior Panel  
(Available in black, tan, light or dark gray vinyl)  
Mounting Hardware

**\*\* Kits do not come with any type of air ride or suspension kit \*\***



## DAY CAB CONVERSIONS

### Extended Day Cab Kit - T600, T660, T800, W900 Aero Cab™ Models

Offering six additional inches of leg room for driver comfort, this kit can be pre-painted and quickly replaces the existing sleeper with no modifications to the factory cab or interior.

When you consider the ease of installation, combined with the rapid turn around time, this kit is the perfect solution for your conversion needs.



#### **KW-A1-B**

Includes:

#### **BASIC KIT - Aero Cab**

One-piece 6" Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Aluminum Upper Cab/Seat Belt Mounts  
Mounting Hardware

#### **KW-A1-D**

Includes:

#### **DELUXE KIT - Aero Cab**

One-piece 6" Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Aluminum Upper Cab/Seat Belt Mounts  
Paintable Fiberglass Window Trim  
17" X 36" Rear Glass  
Window Seal & Lockbead  
Mounting Hardware

#### **KW-A1-C**

Includes:

#### **COMPLETE KIT - Aero Cab**

One-piece 6" Cab Extension  
Bonded 1" X 2" Aluminum Bracing  
Aluminum Upper Cab/Seat Belt Mounts  
Paintable Fiberglass Window Trim  
17" X 36" Rear Glass  
Window Seal & Lockbead  
4-Piece Padded Vinyl Interior  
(Available in black, tan, light or dark gray vinyl)  
Mounting Hardware



Factory replacement seal kit also available.

#### **SK-EXT-3**

**3-piece exterior seal kit** (Required for installation)

**\*\* Kits do not come with any type of air ride or suspension kit \*\***